

Installation instructions 2.8 HDI 2.8JTD

Motor compartment 2.8 Ltr.

III.1



Installation 2.8 HDI 2.8JTD

use with: wiring loom JTD1

- Switch the Ignition off.
- Localise diesel pressure sensor/pressure transducer sensor on the common rail. See picture.
- Pull out the three-pole plug.
- Connect the cable of the CRD System to the original plug of the common rail.
- If possible, lay the cable protected from splash water.
- Now plug the module onto the Sub-D Connection.
- The system is preset; normally you will not need to readjust the module.
- If you want to increase or reduce the power performance, you will only need to turn the potentiometer to the left (increased efficiency) or to the right (reduced power performance). Only CR modules.



III.3
CR/CRD System
Wiring loom JTD1

- For additional Supererogation settings on the CRD-Module the jumperposition in the module has to be changed. Further explanations are available in the: [Instructions Manual CRD System](#)

- Now fit the engine cover back on. The vehicle is now ready for a test drive.


- If you remove the module, you have to plug the peg onto the cable harness or remove the whole tuning system and restore the original settings, otherwise the vehicle will not function properly.



05.12.2005

Close up rail pressure sensor

III.2

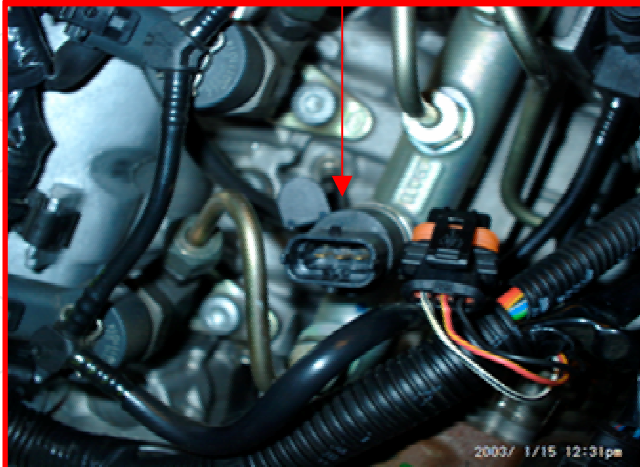

Pressure Transducer Sensor T-cable cable connection engine

